


HISCO HD DVR QUICK REFERENCE GUIDE

1. REVIEWING RECORDED VIDEO

Search is a playback program that offers various playbacks and searching option for recorded data.

Click the **Search Button** on the DVR Main Screen

The Search screen appears as below.

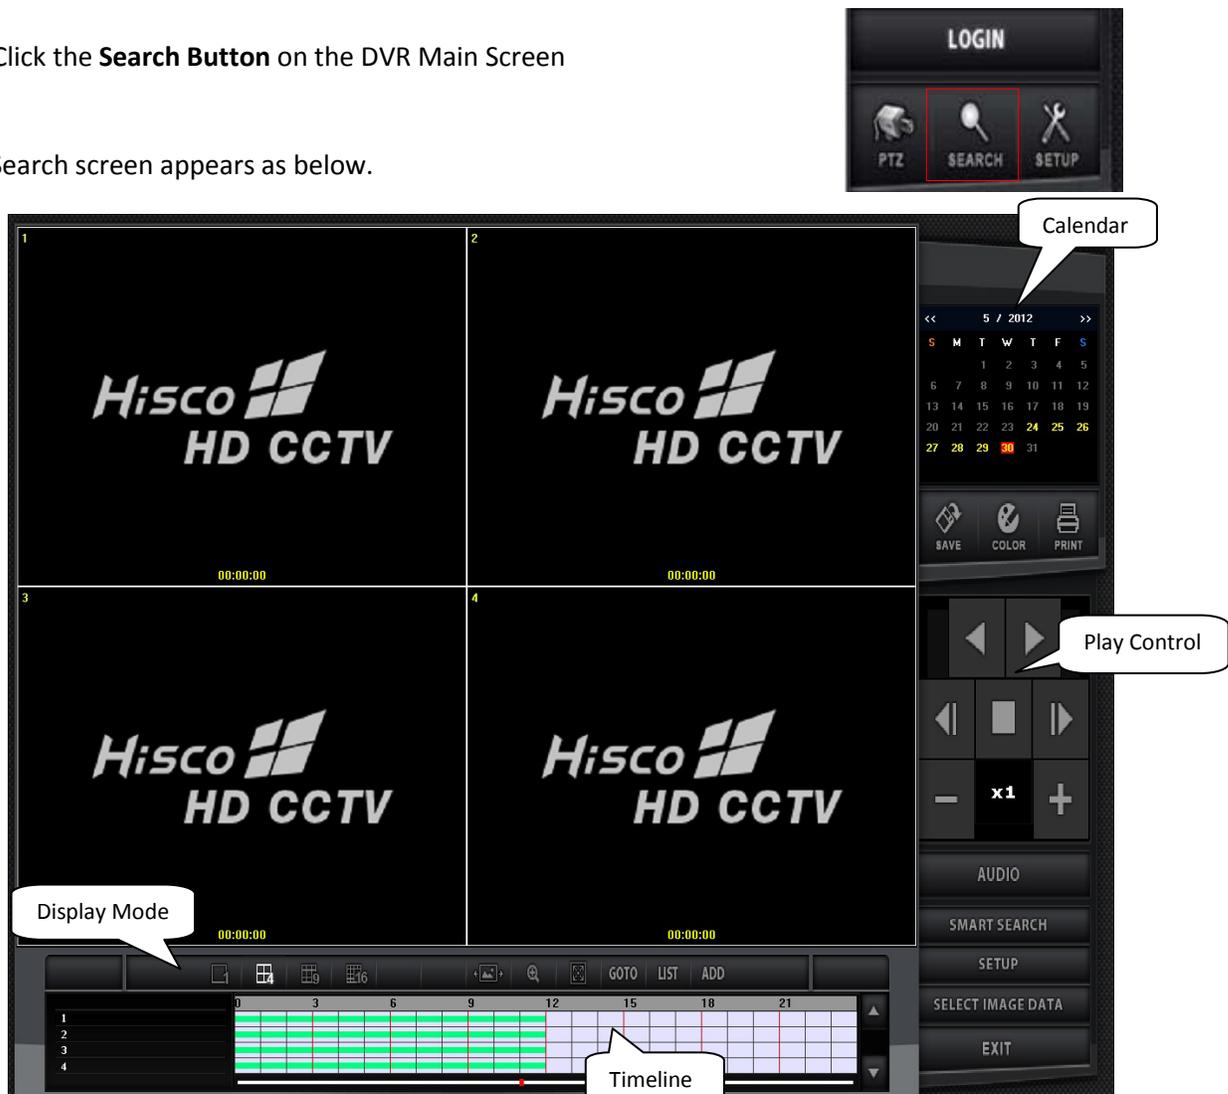

SEARCH PROCEDURE

1. Select month and date on the calendar (On the top right corner)
2. Select hour and minute on the time line bar (on bottom center) of the camera and click the PLAY button
Note: user can double click on the time line bar to expand it to minutes.




2. ARCHIVING VIDEO/IMAGES AND CD/DVD BACKUP

Save function let users save the recorded data as an AVI format file to backup drive or CD/DVD.



Saving AVI video clip


1. Click **SAVE** button on the Search main screen and select **AVI**.
2. Select Cameras and check Audio Recording if audio is enabled for camera.
3. Specify the correct date and time frame
4. Choose **Other External Media** to save footage and create new folder inside Back Up folder (Recommend **D:\Back up**).
5. Click **Recording** to start saving.

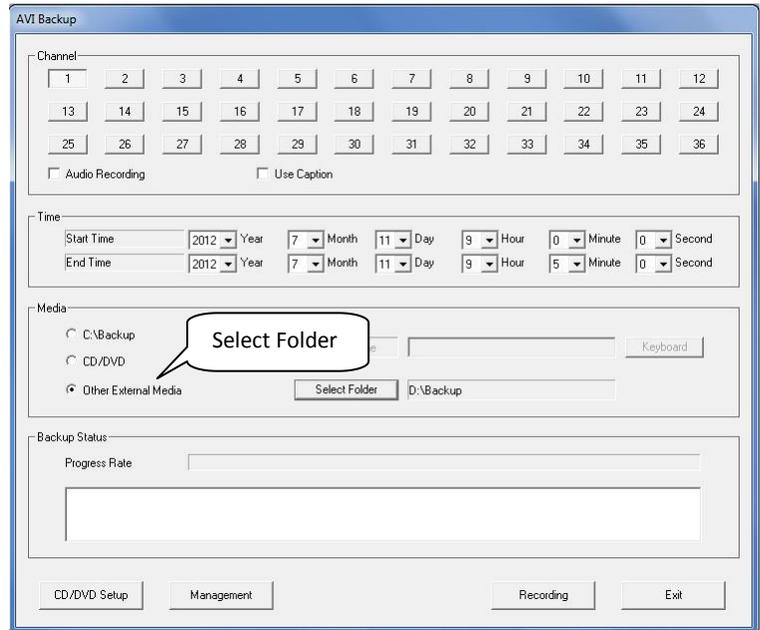

Note: User can save footage to CD/DVD or USB flash drive directly

Saving JPEG image

1. Clicking the **JPEG** icon will provide the user to save the images in the form of JPG files.
2. Choose the **D: -HDD**
3. In the window below choose the **BACK UP** folder
4. JPEG image will be name in the format of MonthDateYearTime


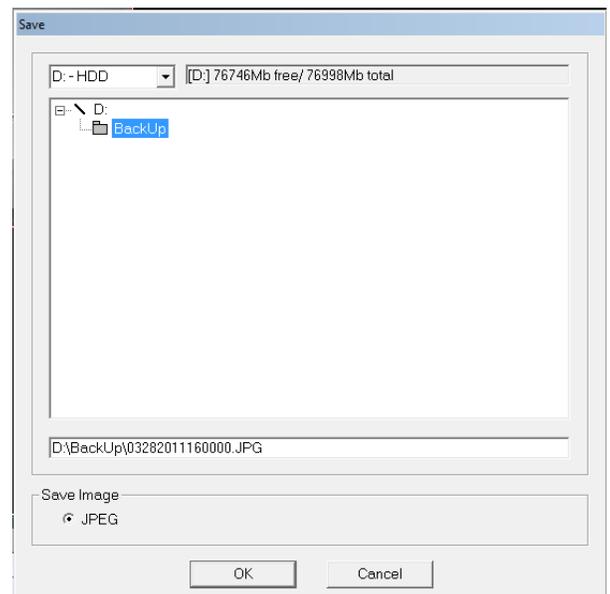


Burning CD/DVD

Hisco HD DVR has built in DVD and CD burning utility. **CD burn** can be used to burn multiple JPG, AVI files, and folders into a CD or DVD



1. Click **SAVE** button on the Search screen and select **CD Burn**
2. Name the DVD/CD at **Volume ID**. This is the name computer will display when play on other computer.
3. **Add Folders or Files to burn**
 - a. Click **Add Folder** to add folder(s) from the disk. When **Browse for Folder** window opens, choose a folder. Check if the folder is added into **Folder List**
 - b. Click **ADD File** to add file(s). When **Open** window opens, choose a file. Check if the file is added into **File List**

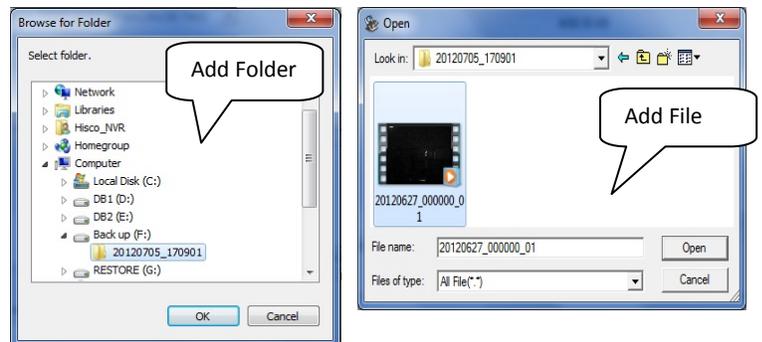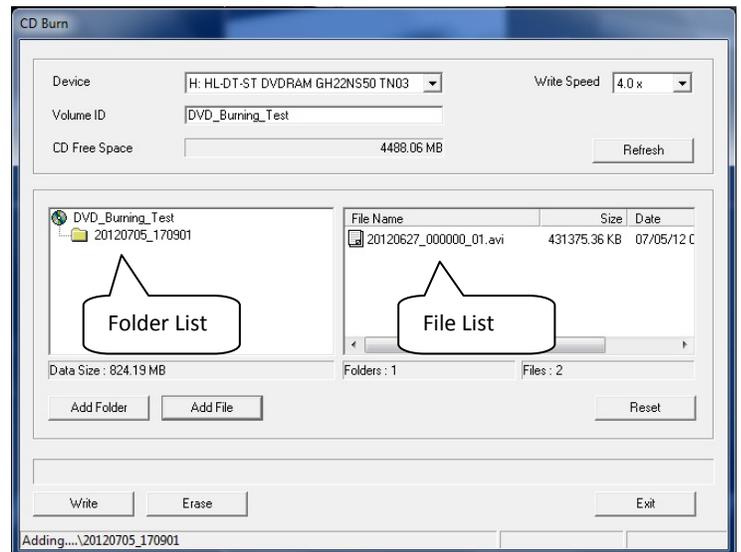

Note: Data size cannot be larger than **CD/DVD Free Space** (CD: 700MB, DVD 4.7GB)

4. Click **Write** to start disk writing process

Note: If DVD/CD is a rewritable disk, HD DVR can erase content on the disk and overwrite it.